


How to Service a Direct Flow™ System


Servicing the Direct Flow™ Air Cleaners

1. Open the metal latches to remove the service cover.


DF600 Element Size

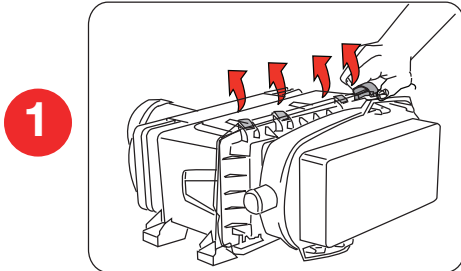

DF900 Element Size

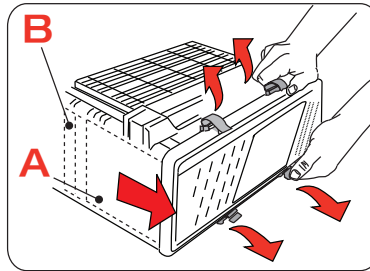


DF1200 Element Size

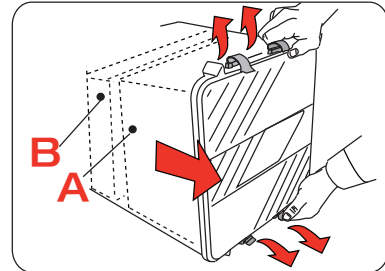


2. Remove the primary element. .


DF600 Element Size

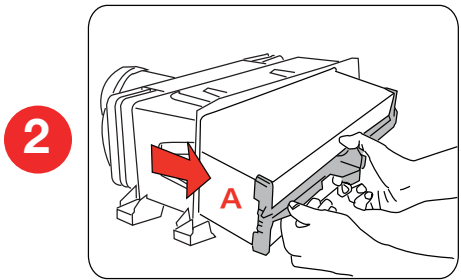

DF900 Element Size

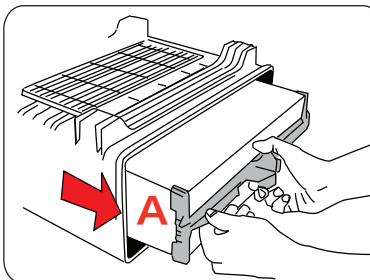


DF1200 Element Size

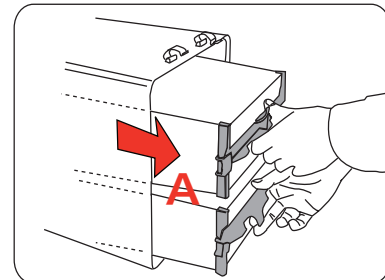


3. Remove the secondary element. .


DF600 Element Size

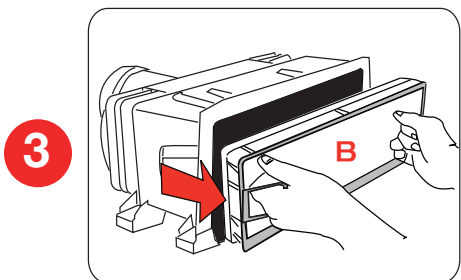

DF900 Element Size

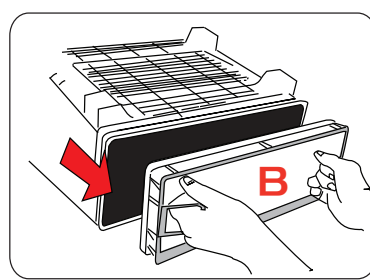


DF1200 Element Size

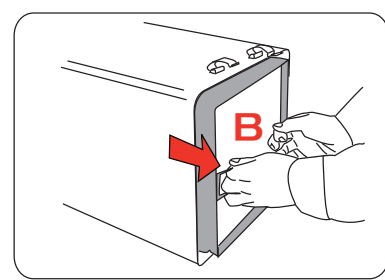


4. Replace the primary and secondary elements in the same order and close the metal latches. .

DF600 Element Size

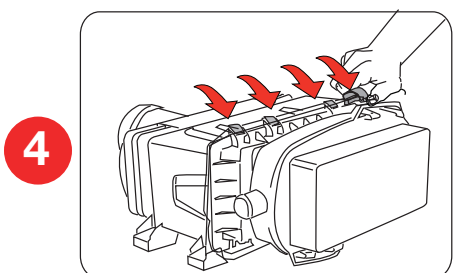

DF900 Element Size

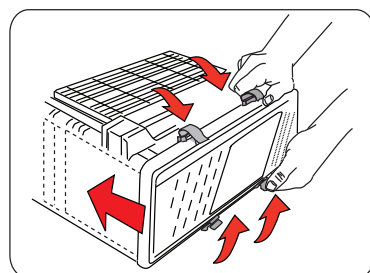

DF1200 Element Size

