MIKALOR




Thumb Screw for ASFA L and S worm-drive clamps

Worm-drive clamps can be fitted relatively tightly, easily and quickly using this Thumb Screw, without the need for tools.

Once the clamp has been tightened, the thumb screw can be removed.

Ø Application mm	Part Number	Bandwidth mm	Box Quantity	Outer Box Quantity
All Ø available	02170461	9 / 12	100	1.000

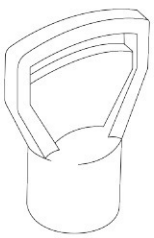

TECHNICAL INFORMATION	
MATERIAL	Plastic
FINISH	Available in red

Available Through BORSERINI SRL
Via C. Negri 10-12 - 23030 Chiuro (SO) - Italy | +39 0342 209200 | info@borserini.it | www.borserini.com
Registered Office: Via Parolo 38 - 23100 Sondrio (SO) - Italy